



Co-Pro capture 4K/HD wildlife camera Quick-start Manual

1. Open the camera by unhooking the clips that hold the camera closed.



2. Insert an SD card (Up to 512GB in size) into the slot on the bottom of the camera.



3. Insert non rechargeable AA batteries into the battery compartment. You can use 4 however we recommend using 8. Make sure to put the battery cover in place once batteries are inserted.




4. Turn the camera to “Test” using the switch.



5. The camera takes a moment to turn on. When on press the “menu” button.



6. You can scroll through the menu using the up and down arrow keys. Beyond choosing whether you want photos or videos the key things to change are video length, interval, and sensor sensitivity (We recommend high). You confirm your selection by pressing “OK”.

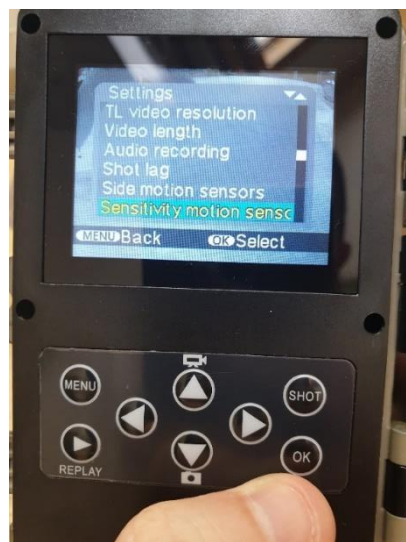

7. Make sure you format your memory card before use by scrolling through the menus and pressing “OK” when “format” is highlighted



8. When you finished in the menus use the switch to turn the camera off then move it to “on” to start the camera.
9. A red light will flash for 15 seconds on the front of the camera to indicate that it is starting. Position your camera now. We recommend around 1 metre from the ground.



10. Close the camera using the clips on the side. Your camera is now ready to use.



Tel No – 01485 211223
Email – Sales@onestopnature.co.uk

Notes

- Connection to a television is possible using an AV cable (Sold separately).
- External power supply is possible using an optional solar panel (Sold separately)
- For best performance please use Energiser Lithium AA batteries.